

# IMPORTANT NOTE PLEASE READ

## **Cleancut Shaver Operations, Safety and Maintenance Instructions**

### **For Best Results:**

- Skin must be dry and free of oil/ moisture
- Use BEFORE showering/ bathing
- Dust lightly with body or baby powder before use

### **Directions:**

1. The hair must be trimmed down to stubble by using a Shavy Femini Trimmer. The Cleancut will not work on thick bushy or long hair. (Use hospital grade Baby Powder which consists of Corn Starch)
2. Once the long hair is trimmed to stubble, determine the direction of the hair growth.
3. Remove the clear plastic cap of the ES412 or ES1080 Cleancut and slide the switch to the "on" position.
4. Stretch the skin taut with one hand and shave in the opposite direction of the hair growth in a gentle circular motion. Applying too much pressure to the skin with the razor may irritate your skin or damage the razor. (Use hospital grade Baby Powder which consists of Corn Starch)
5. After you have finished, turn the switch to the "off" position.
6. Unscrew the foil and clean with the brush provided.
7. Gently lift the tri-blade to remove the blades and clean with the brush provided.
8. Replace the blades and the foil after cleaning. Replace the clear cap.

### **Safety Instructions:**

1. Altering the shaving foil or using the razor without the shaving foil can result in SERIOUS DAMAGE to your skin and body.
2. Never turn the razor on with shaving foil removed.
3. DO NOT touch inner tri-blade with anything other than the brush.
4. Foil and tri-blade may also be cleaned using mild soap and water but must be dried thoroughly.
5. DO NOT drop the foils or blades. This will damage the shaver. Replacement blade and foil can be purchased online at [www.auctionbrands.com.au](http://www.auctionbrands.com.au) or [www.auctionbrands.co.uk](http://www.auctionbrands.co.uk)

### **Maintenance:**

1. Once a month, use light clear oil, such a sewing machine oil or "clipper" oil and place on (1) drop on the inside of the foil. Replace the foil and lock into place and switch on to circulate the oil over the foil.
2. Do not place shaver near heat or near open flames.
3. Never leave the shaver unattended while it is in operation. Turn off
4. Keep out of reach of children.
5. Never disassemble the shaver as the warranty becomes void. If you do not follow the directions, the warranty may be void.

### **Warranty**

CleanCut Personal Shavers and trimmers come with a 12 month warranty from date of purchase. This covers manufacturing defects only and not damage caused from misuse, mishandling or by dropping. Upon return of the defective shaver we may repair or replace it at our discretion. For all warranty issues, contact AuctionBrands on +61 (2) 4353 5885 ext 1 or email [info@auctionbrands.com.au](mailto:info@auctionbrands.com.au)